






3 x 3 M

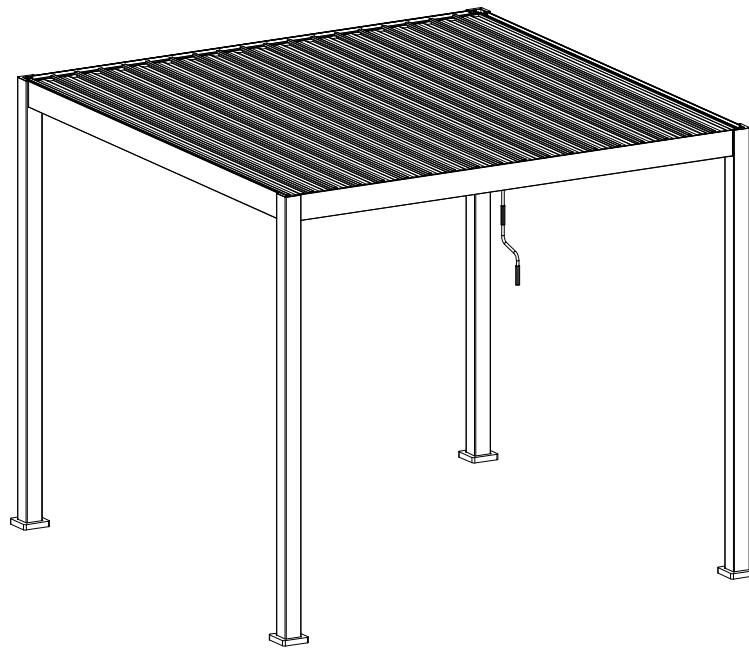


At least need 3person work together











REQUIRED TOOLS



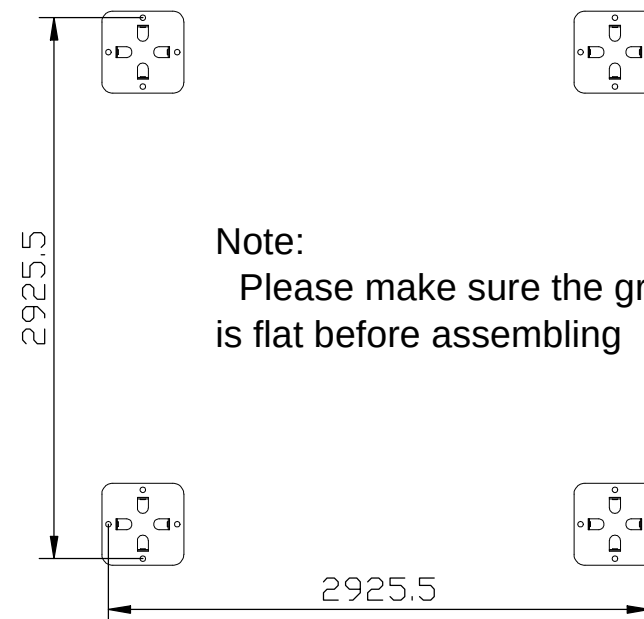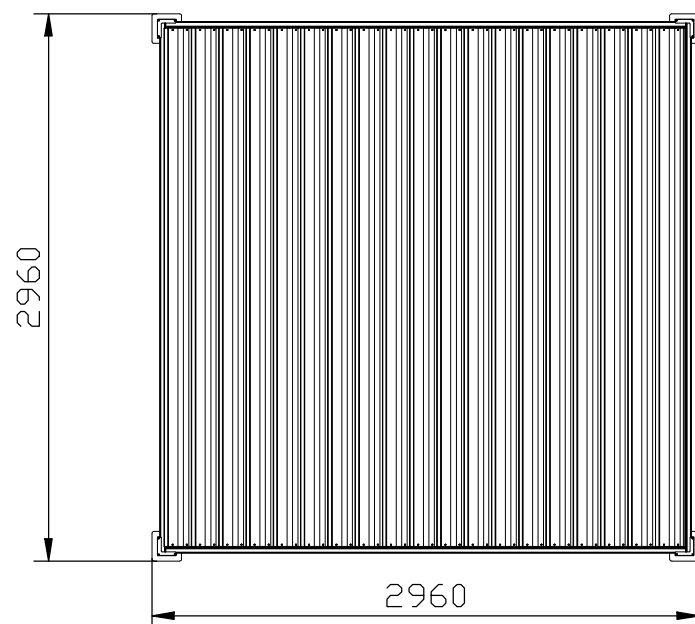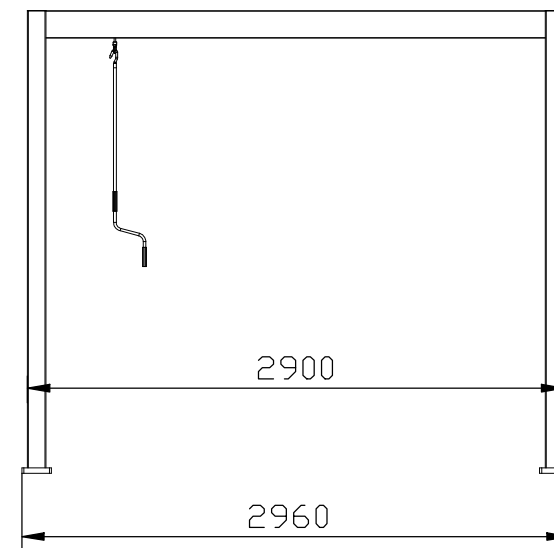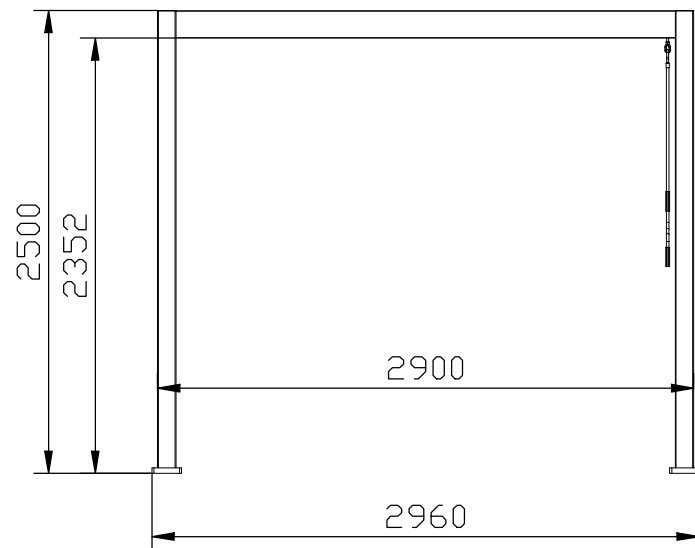


Note:
Please make sure the ground
is flat before assembling

 (A) x4	 (B1) x1
 (B2) x1	 (B3) x1
 (B4) x1	 (D) X1
 (D1) x1	 (F1) x1
 (F) x1	 (L) x1
 (Q) x19	

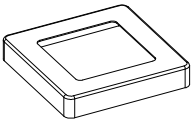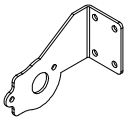
 J x4	 J1 x4	 J2 x4	 M x1
 M1 x1	 V1 x1	 V2 x1	 W x1
 1 x24 M6x15	 2 x2 M6x30	 3 x78 M5x10	 4 x8 ST5.5x16
 5 x2 M5x15	 6 x36 M6x42	 x1  x1	



A x4



J x4

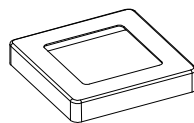


J1 x4




M6x15

1 x16

<1>

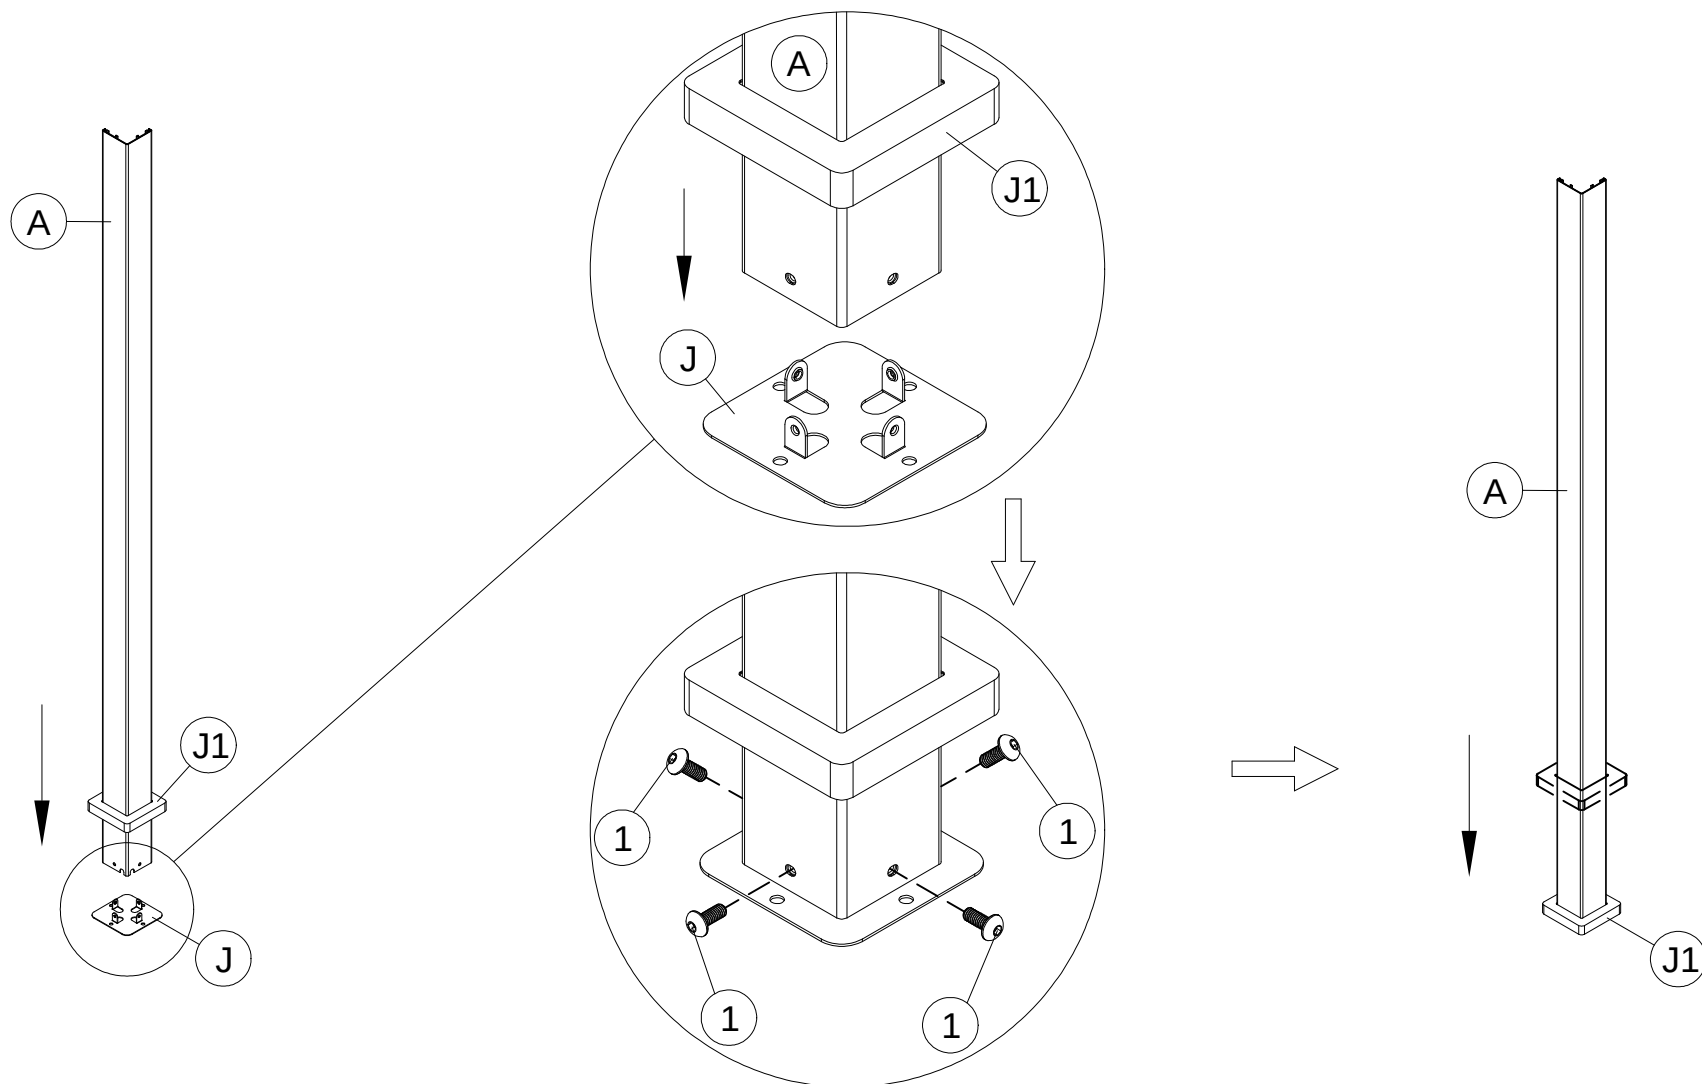




B2 x1




D X1




M6x42

6 x18

<2>

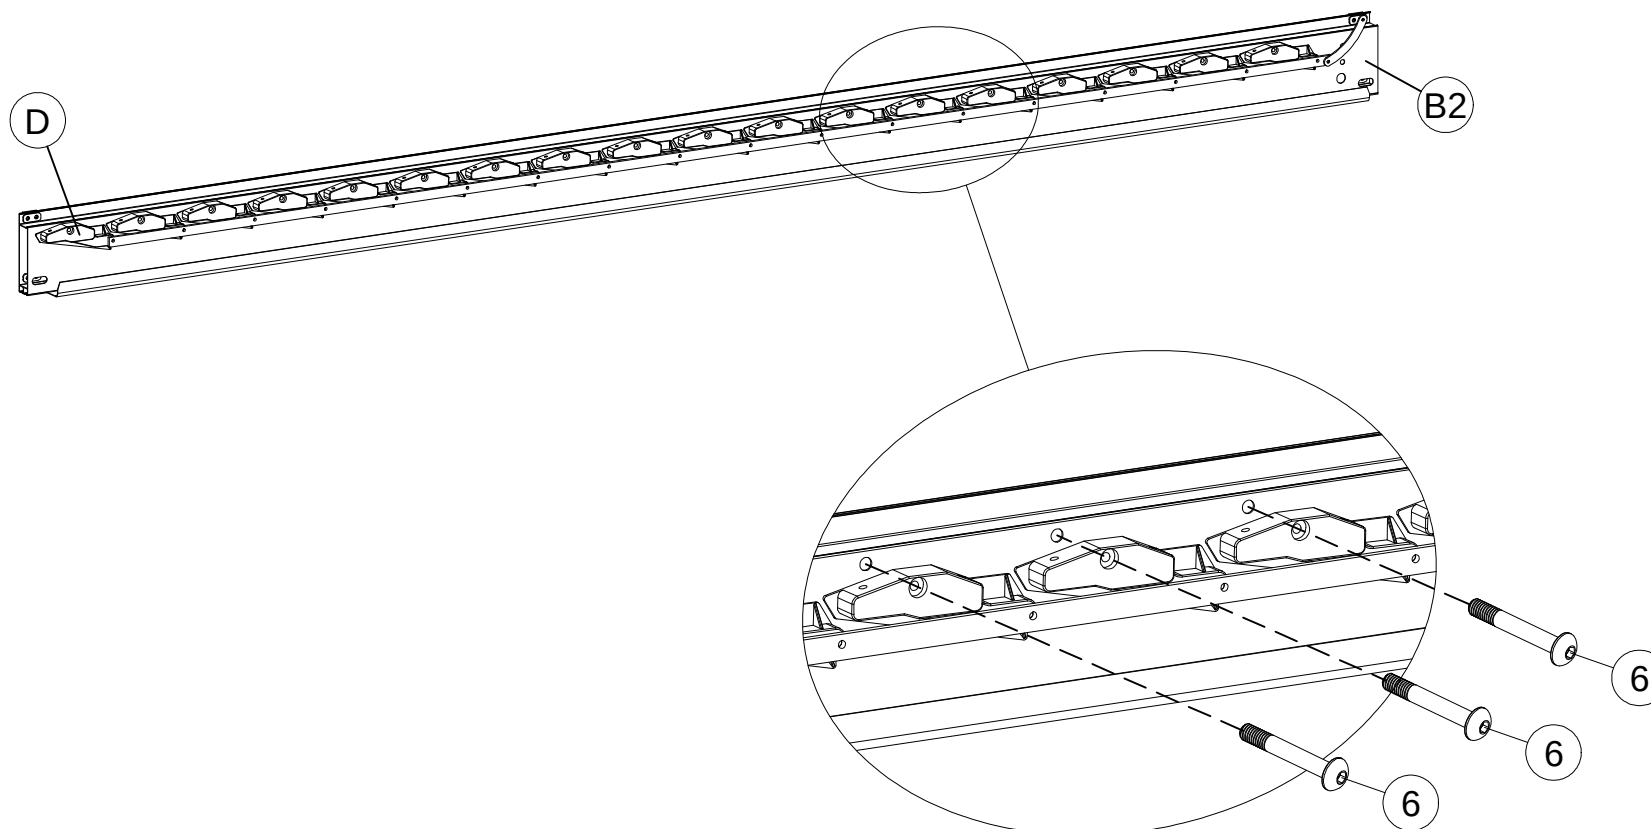




B4 x1




D1 x1



6 x18

M6x42


<3>

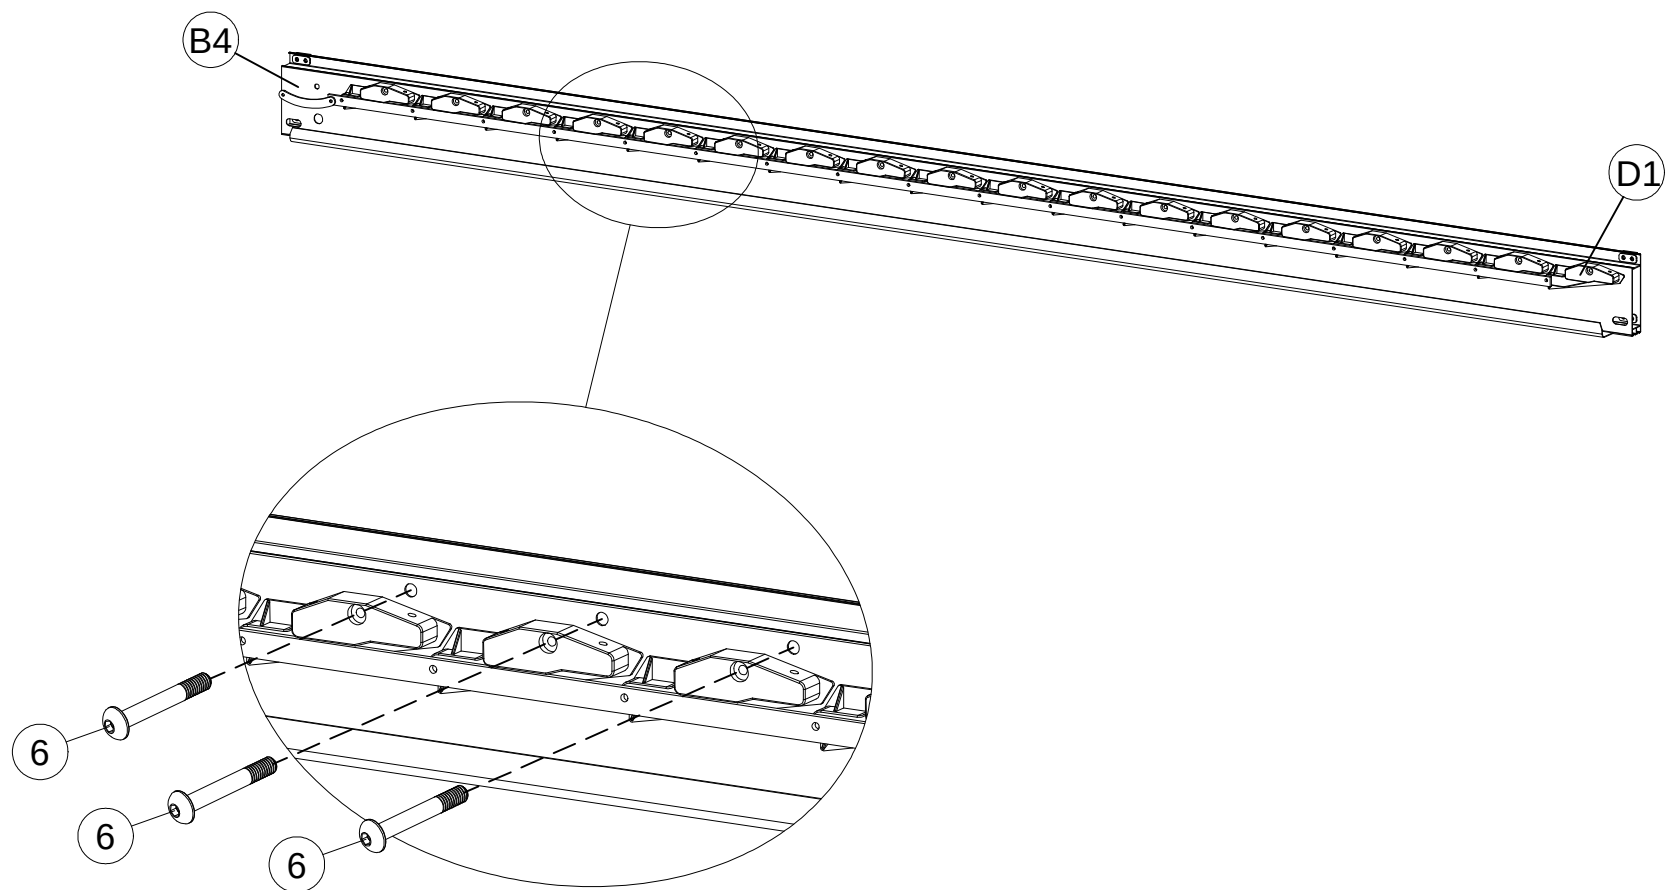




B1 x1


<4>

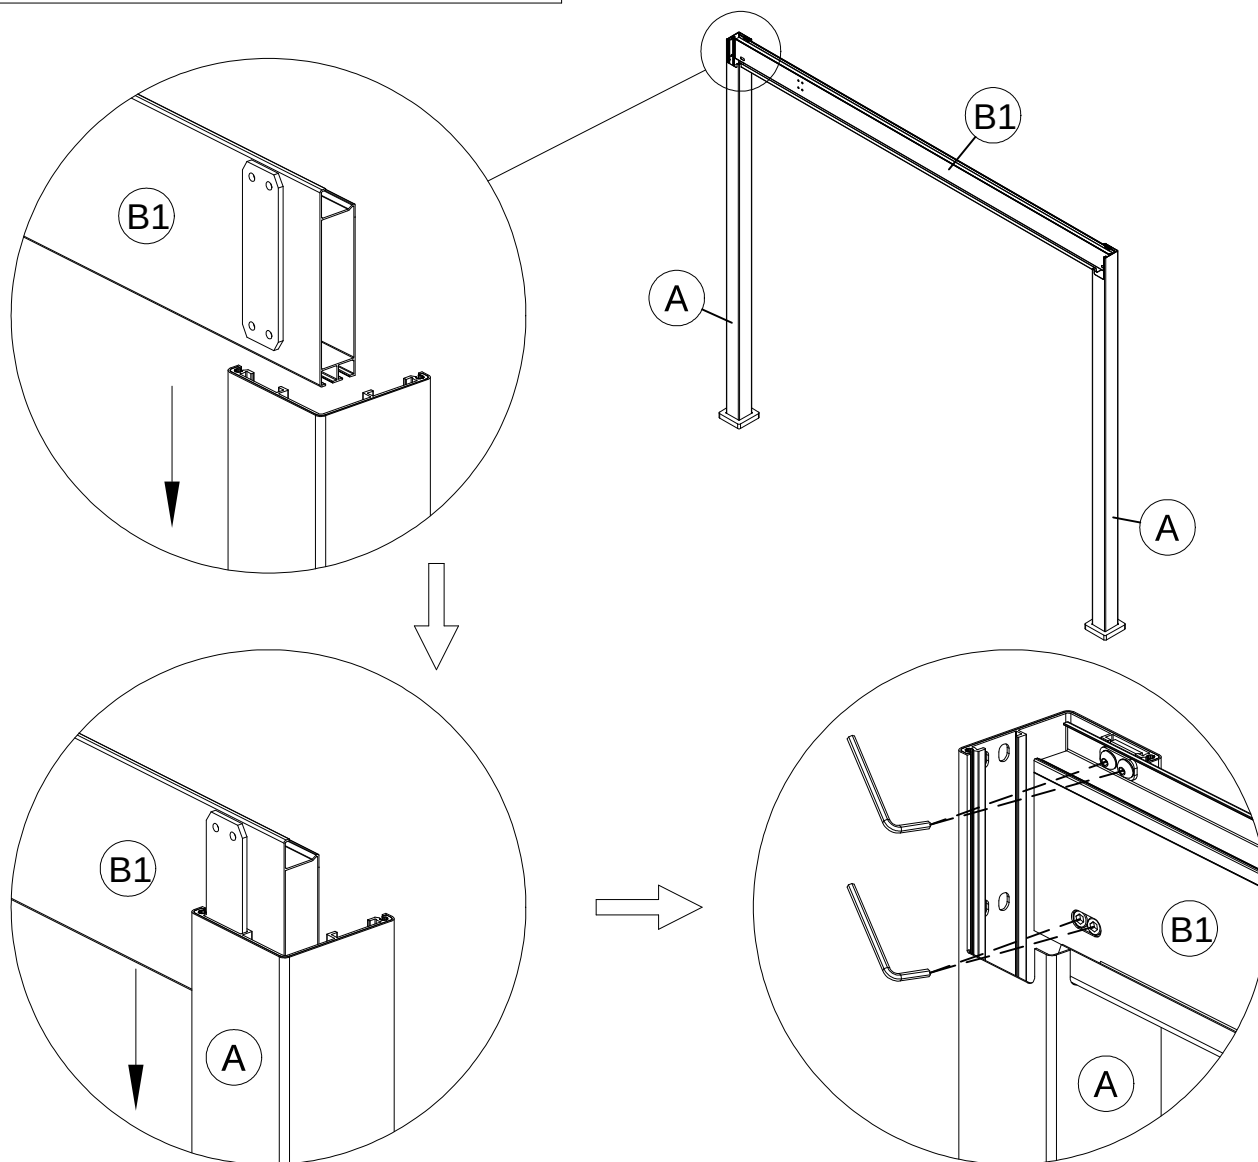




(B3) x1








<5>




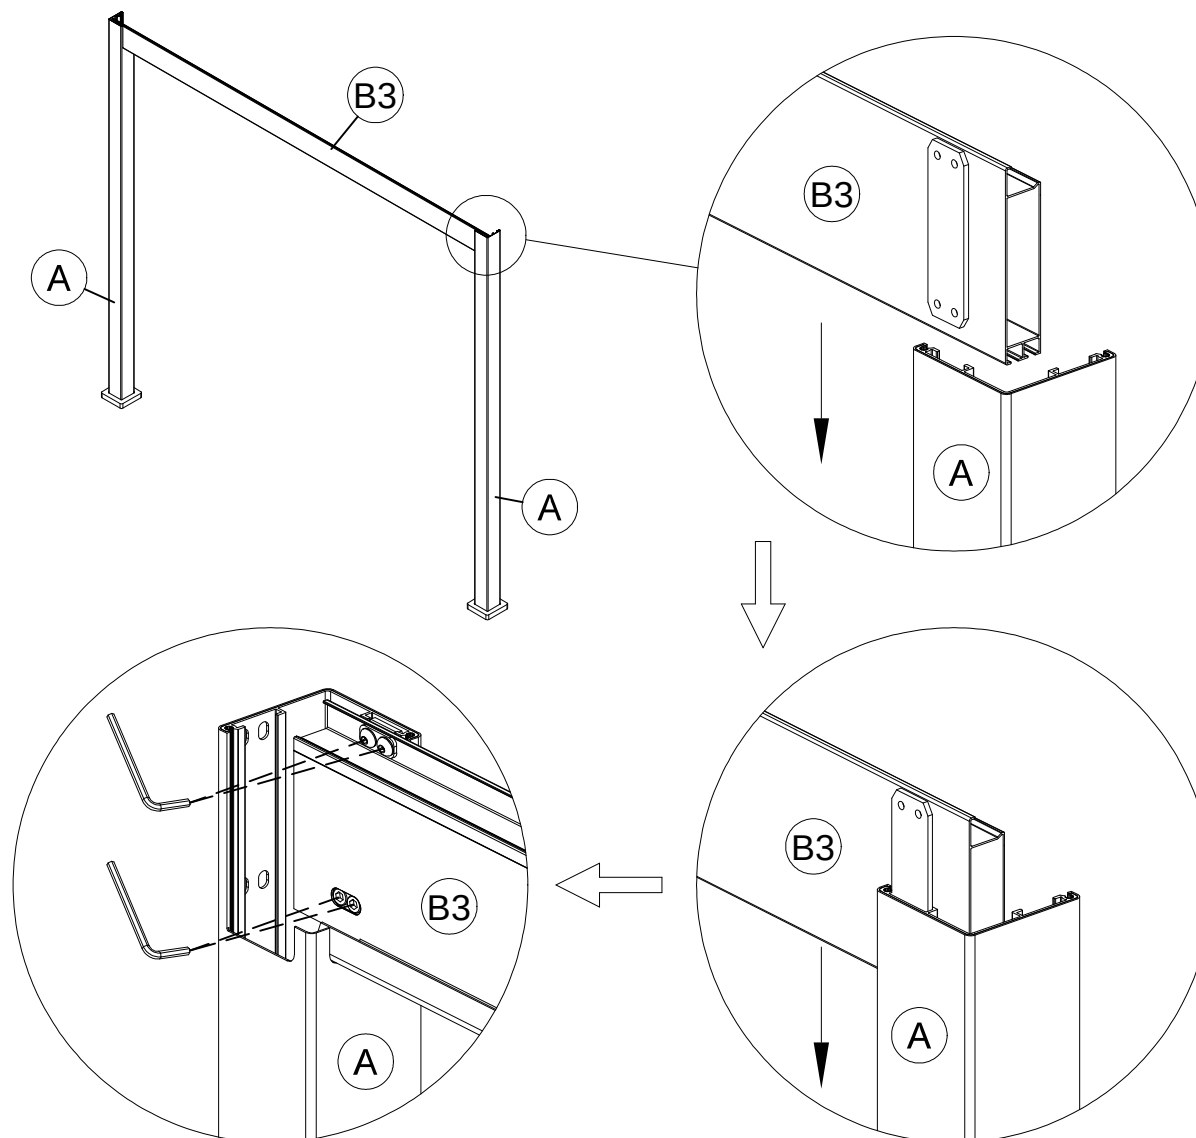


<6>

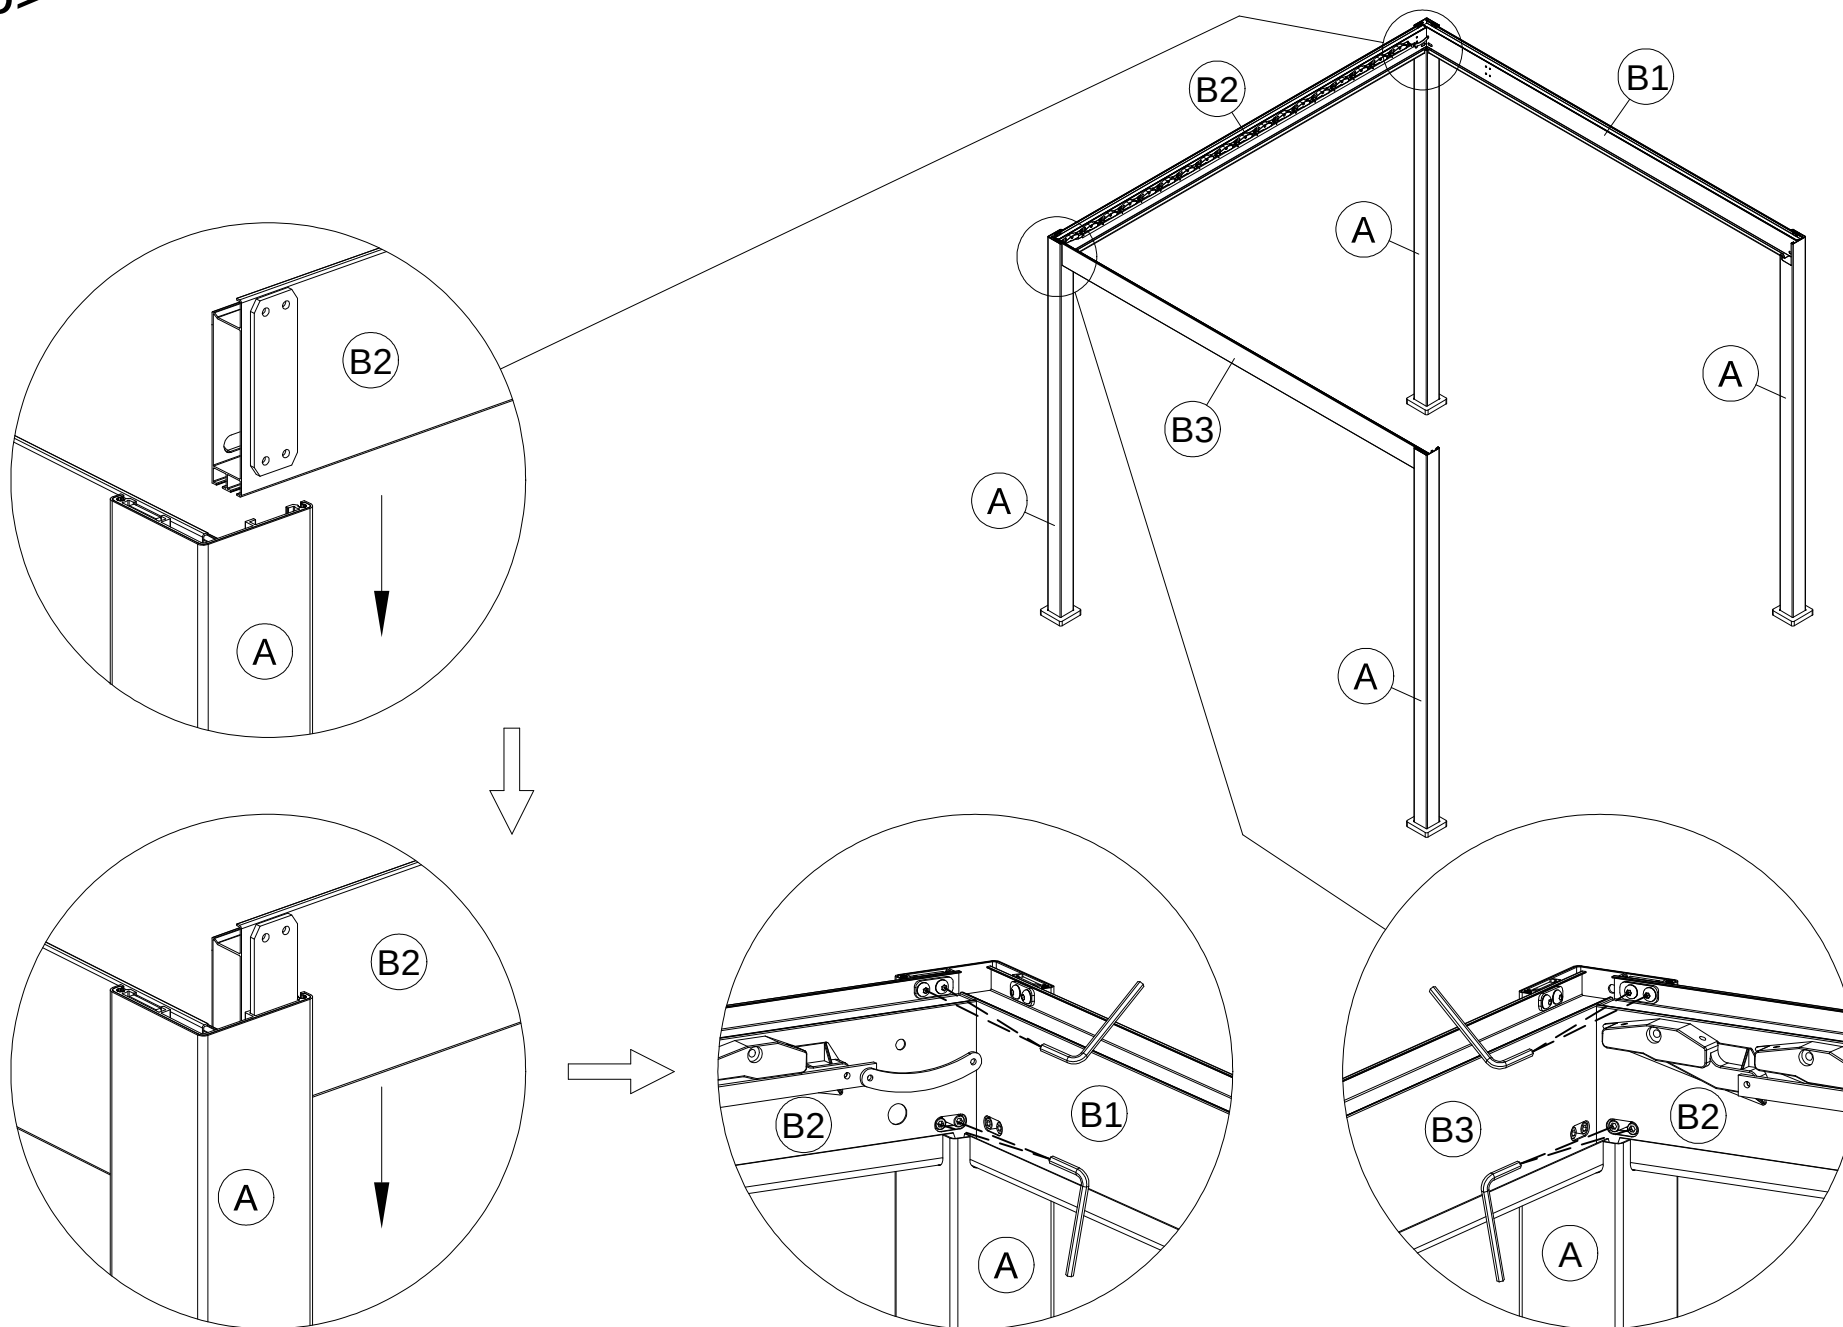





<7>

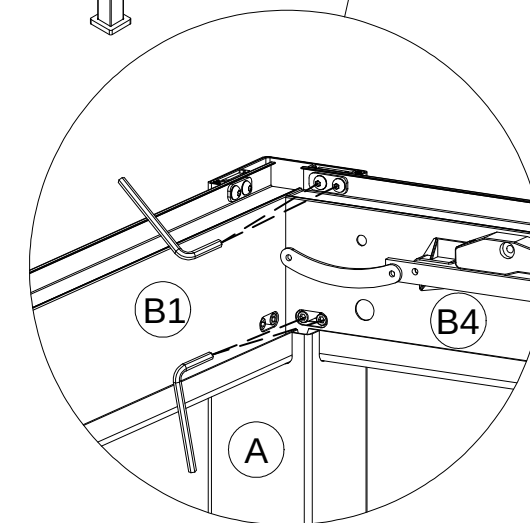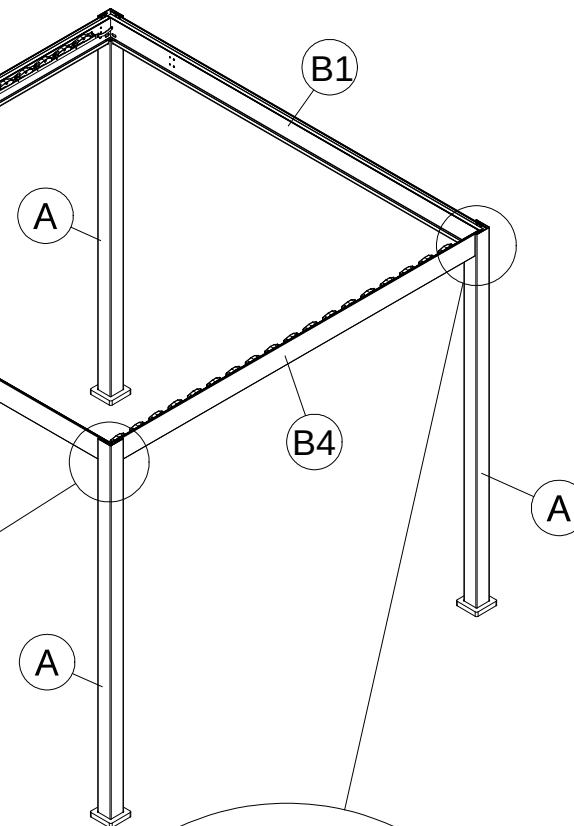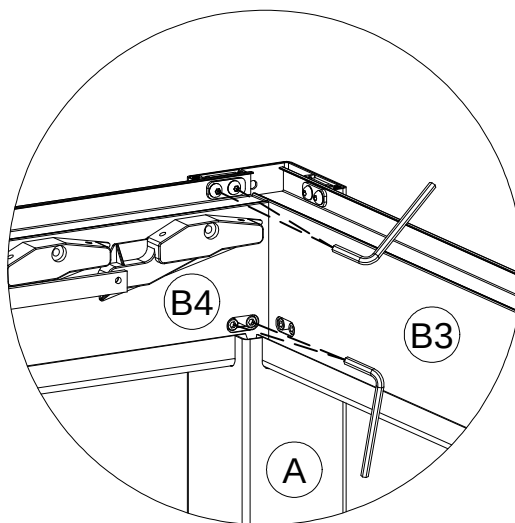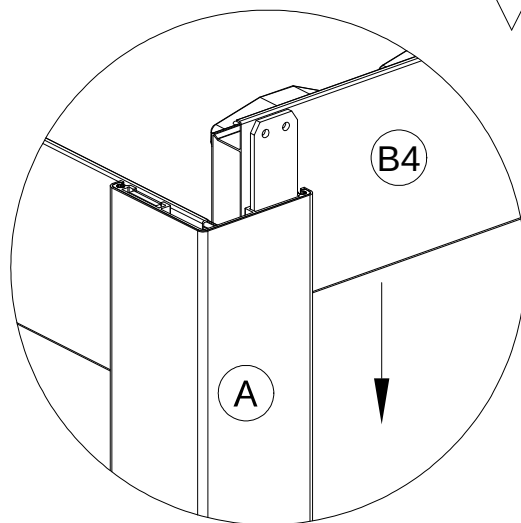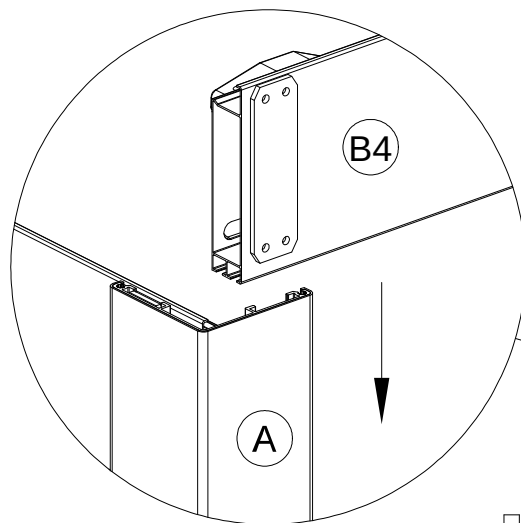

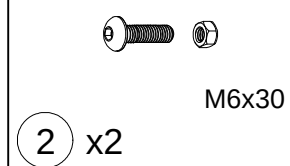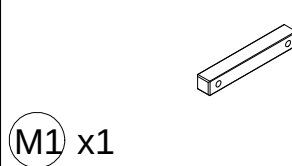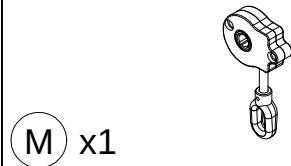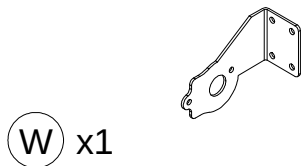


<8>

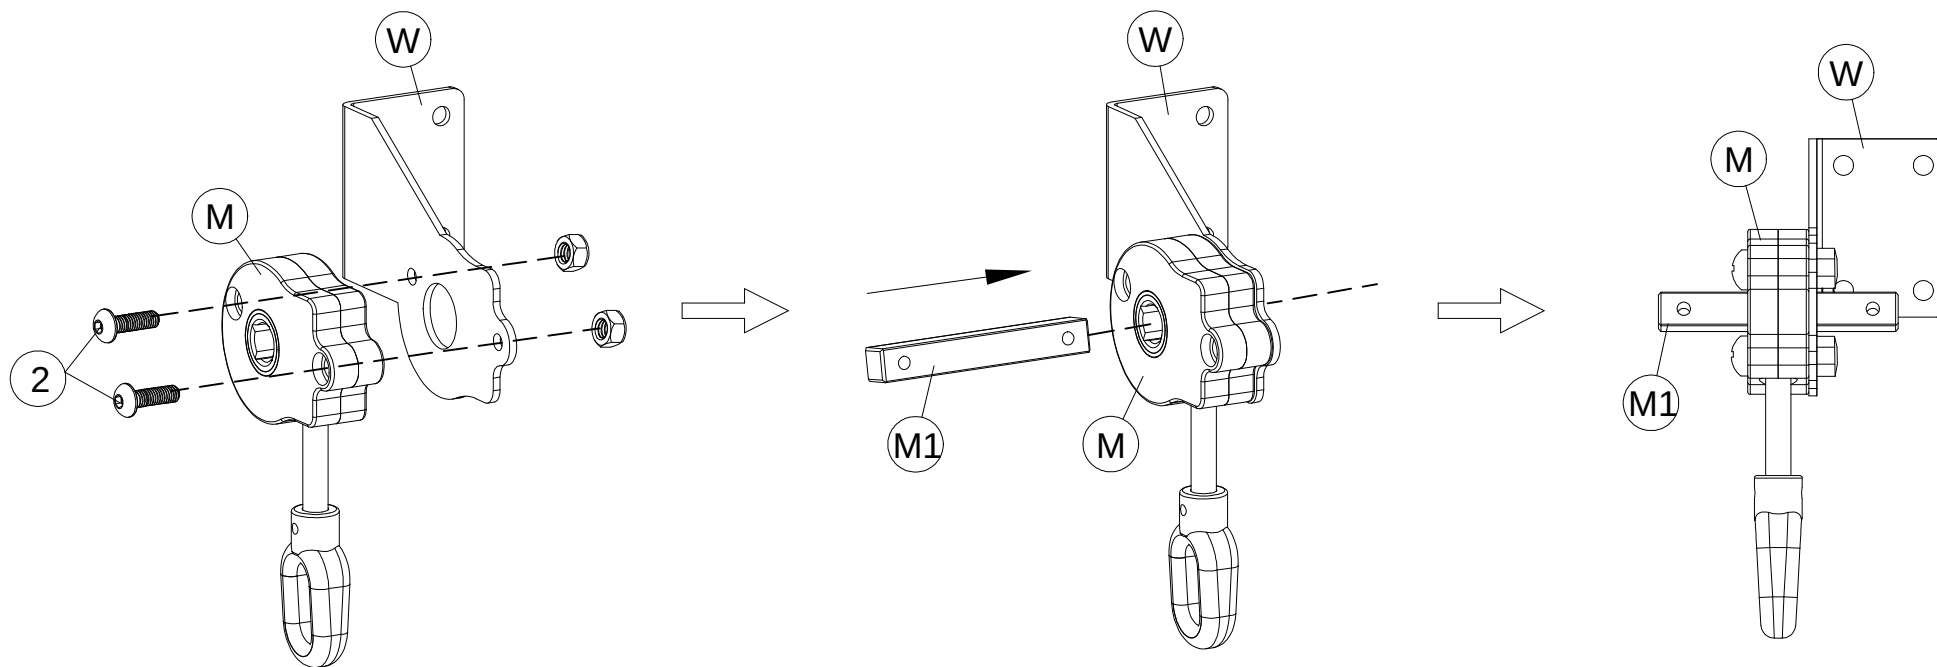

 F1 x1	 F x1	 V1 x1	 V2 x1	 3 x2 M5x10
---	--	---	---	--

<9>

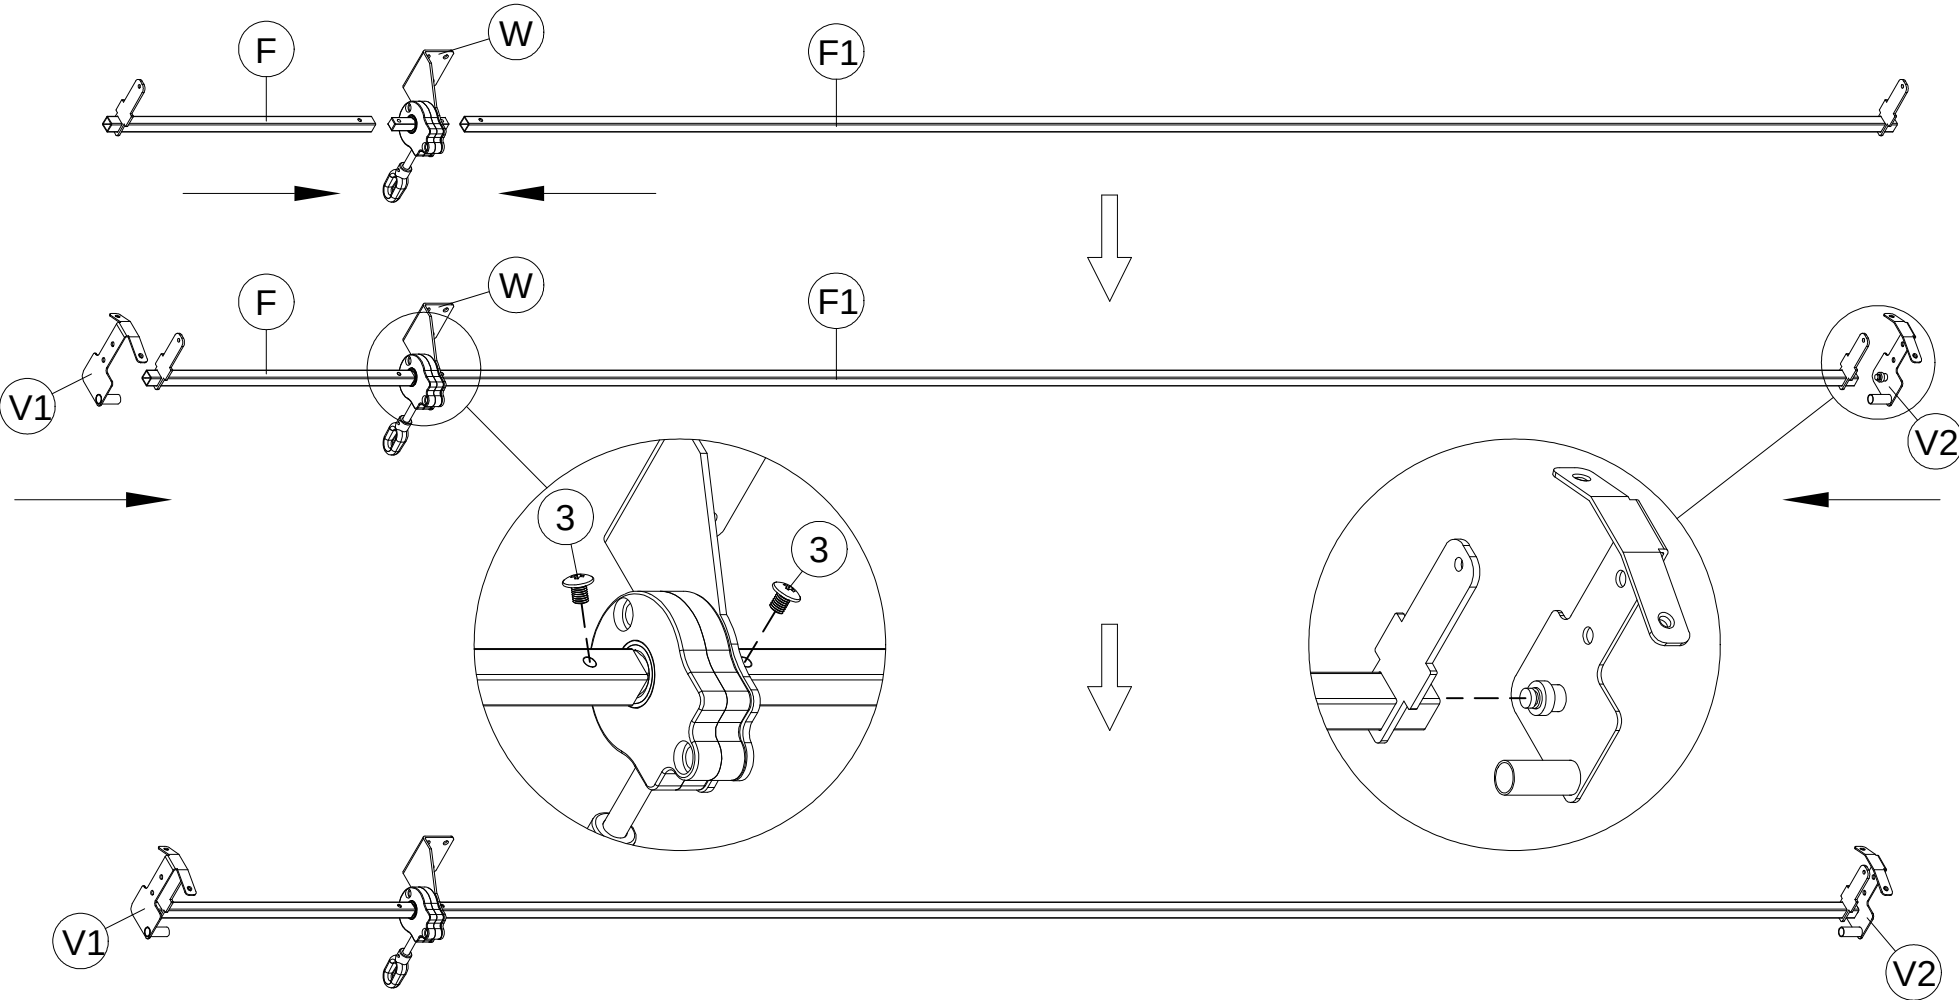





M6x15

1 x8

<10>

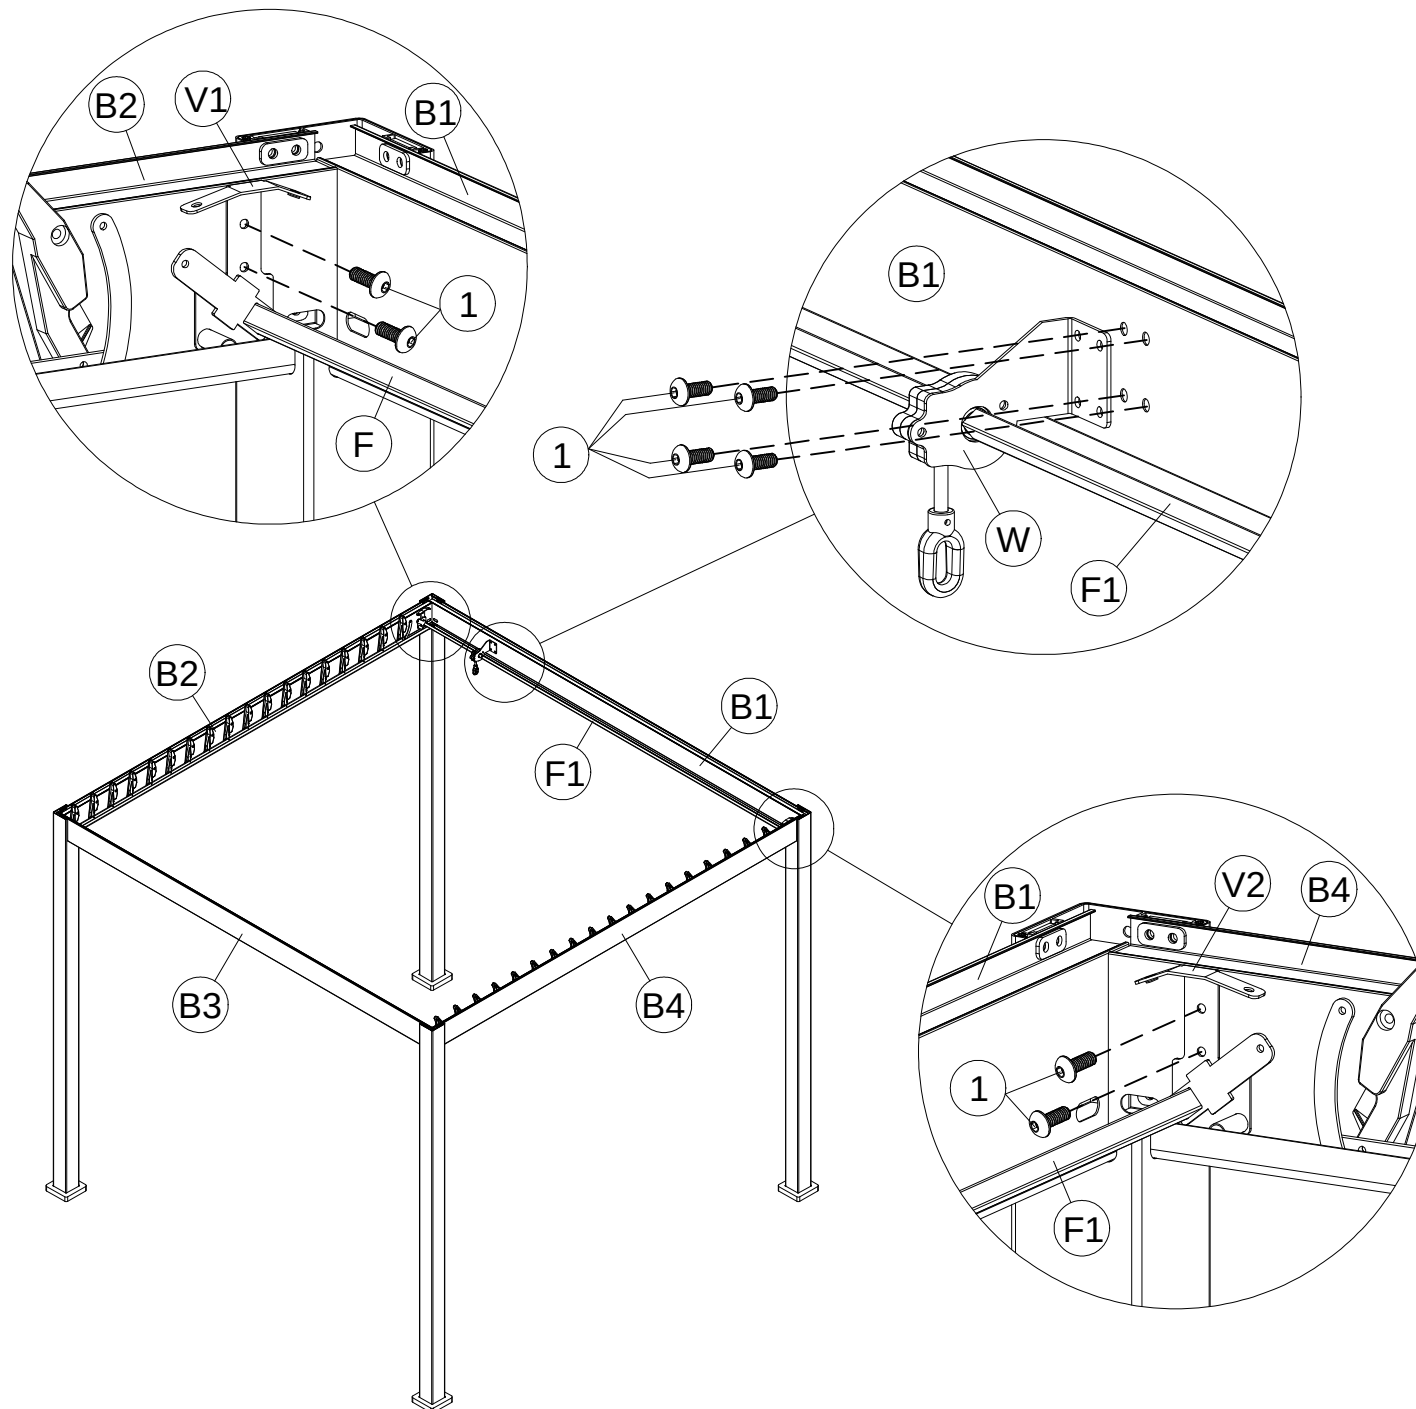



⑤ x2


<11>









L x1

<12>

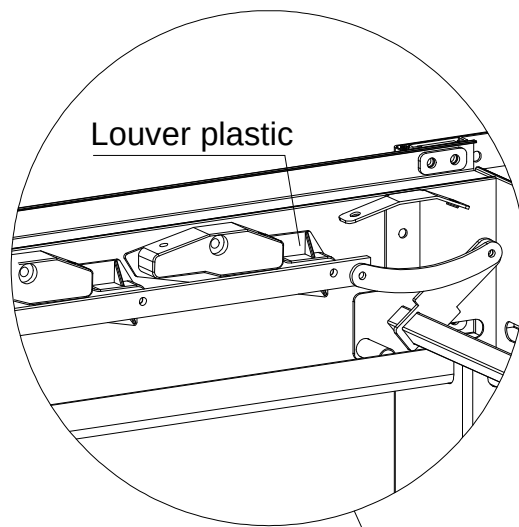

Tips: Twirl the " L " to make the louver plastic flat.

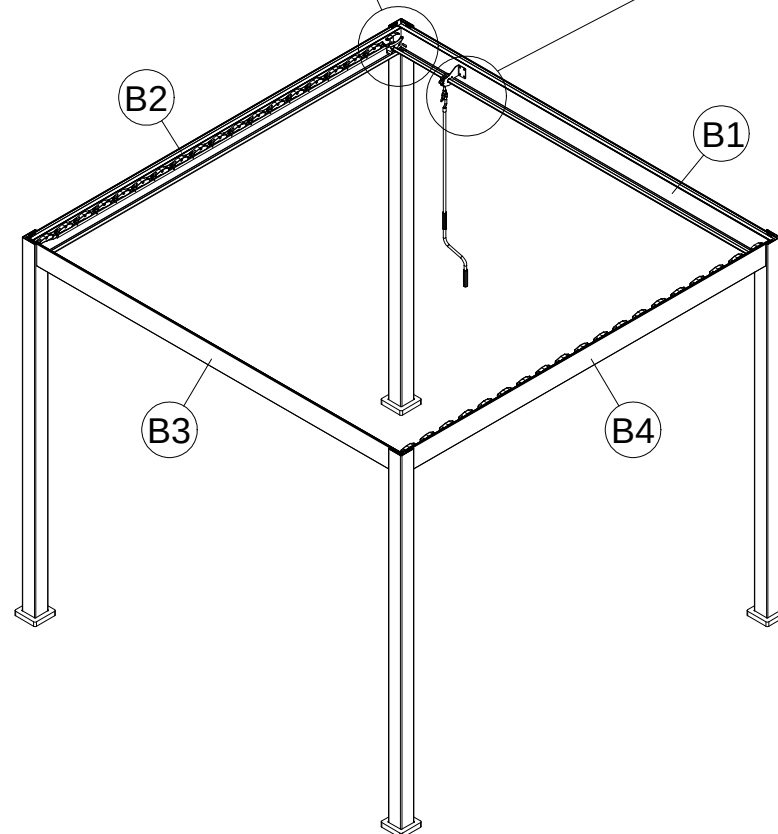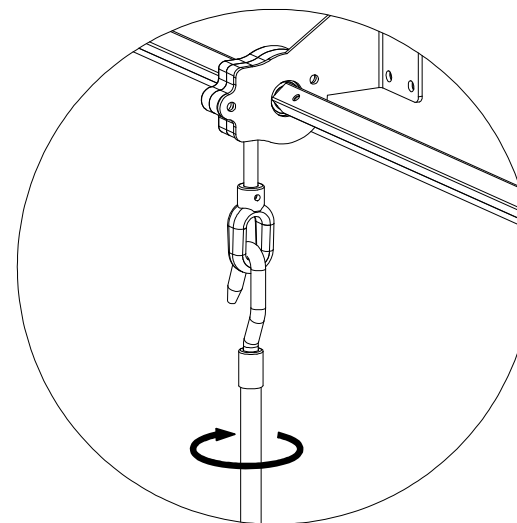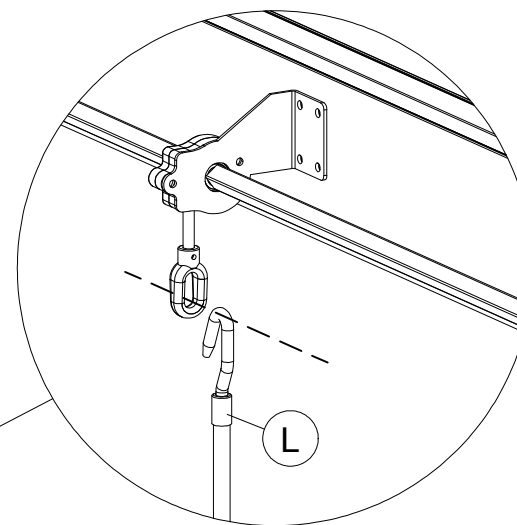



Q x19




M5x10


3 x76

<13>

Tips: Louver "Q" assemble
order from B3 to B1

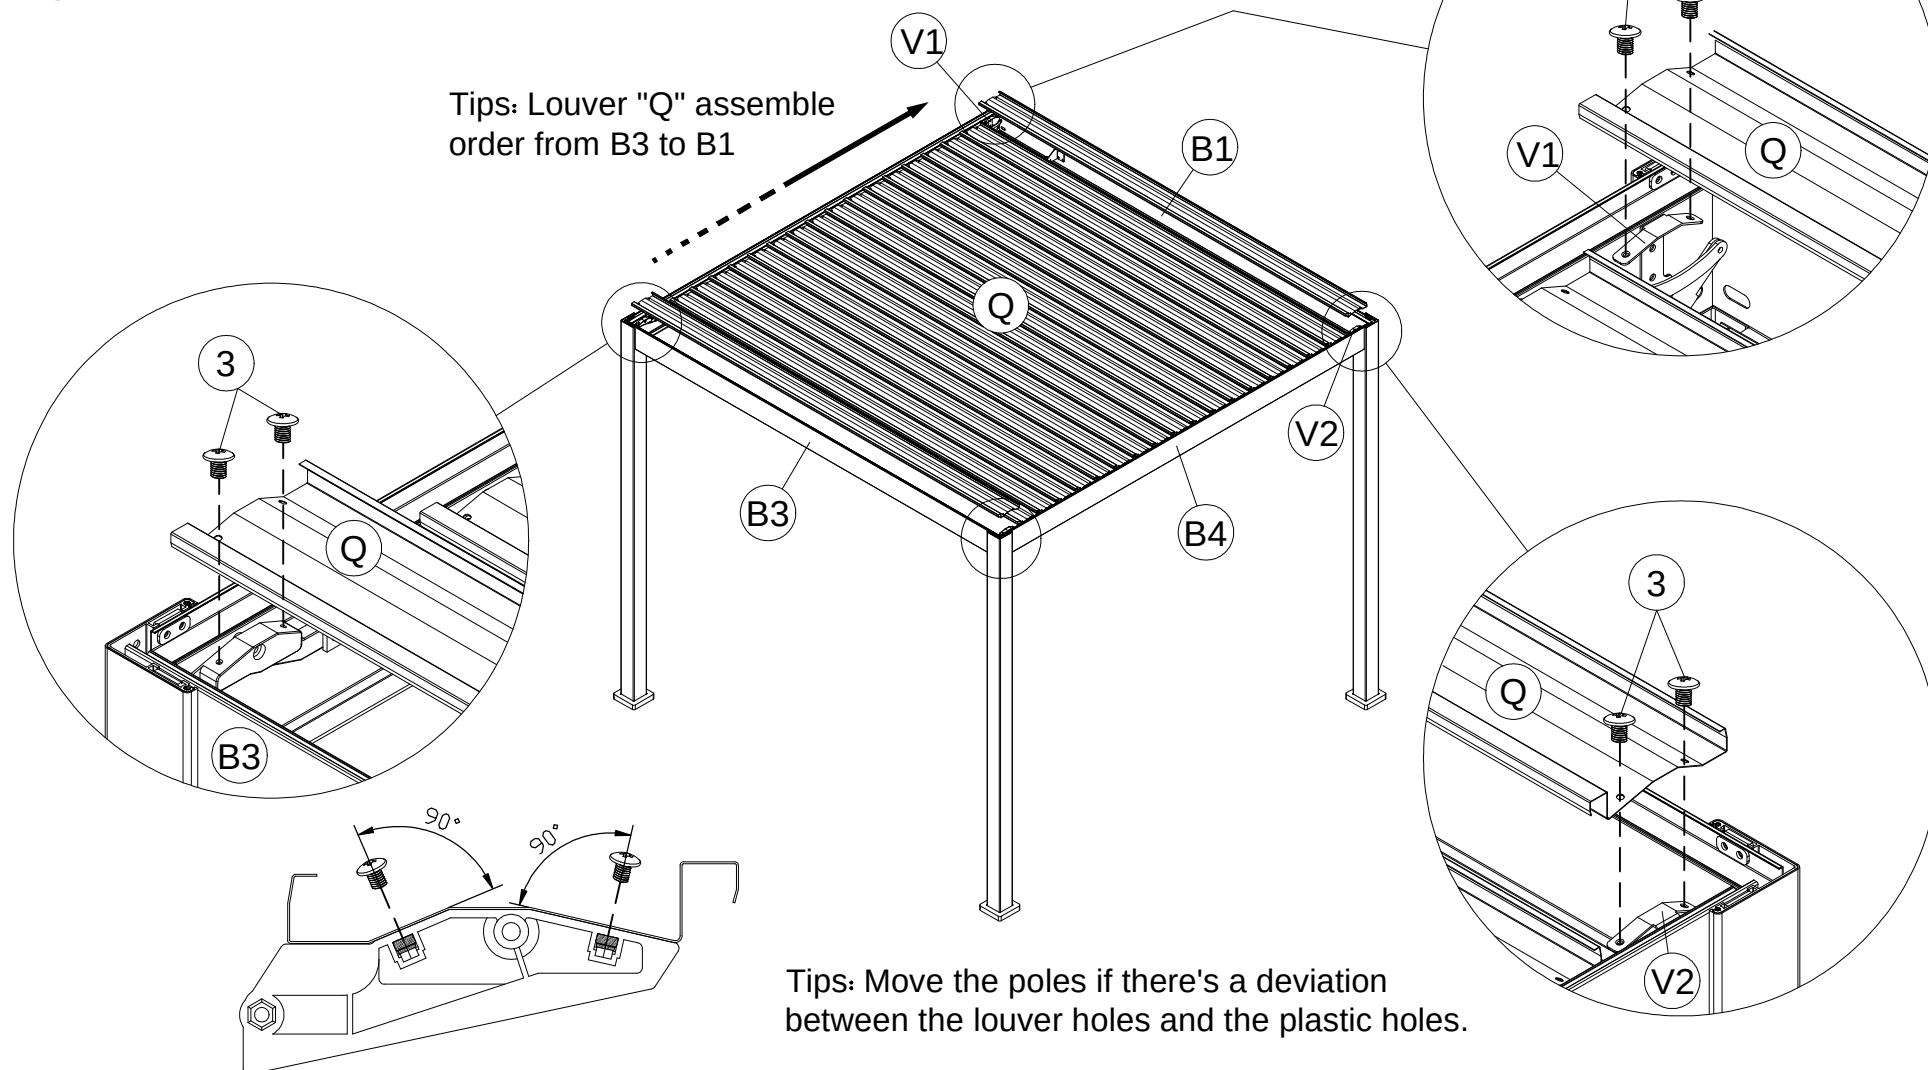

Tips: Move the poles if there's a deviation
between the louver holes and the plastic holes.

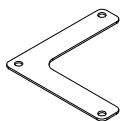

J2 x4



ST5.5x16

4 x8

<14>

